



**LANGEOHREN**

For more information  
<http://www.langeohren.cn>



**LANGEOHREN**

# LEEDS

USER MANUAL

 
## 用户手册




# LANGEOHREN

---

型号:LEEDS

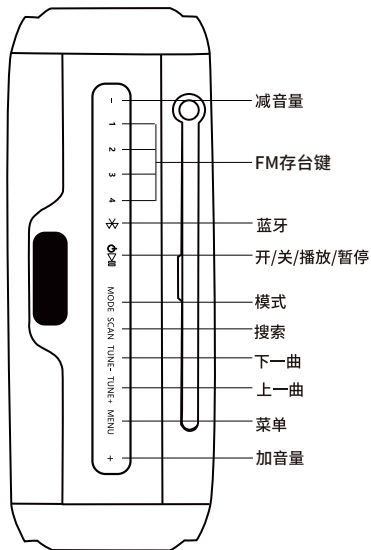


01



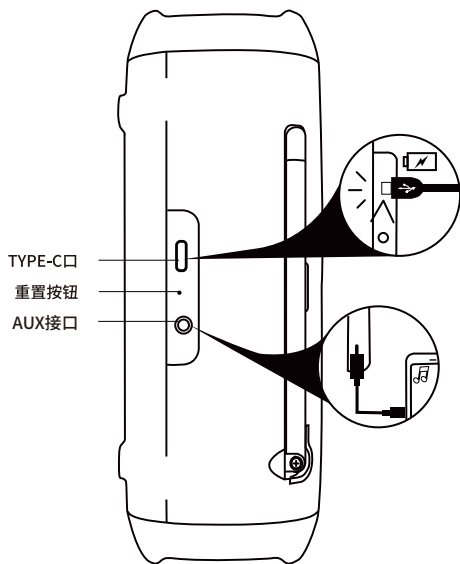 


02

## 开始使用

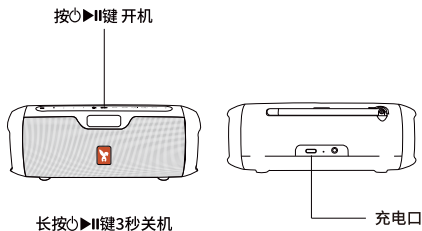 


## 初次配对

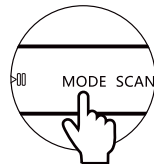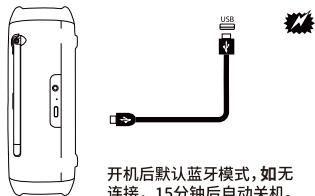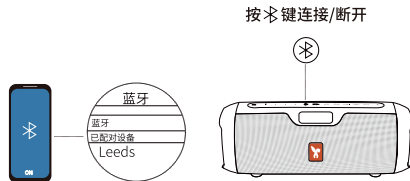   

依次为 蓝牙/AUX/FM 模式




## 基本操作

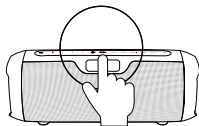 


上一曲TUNE-/+下一曲



 
减一级音量

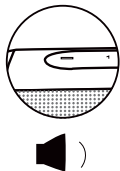

加一级音量

 


## AUX线使用

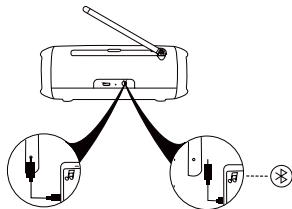 


当插入AUX线后,进入AUX模式。拔出后默认蓝牙模式。

## FM功能

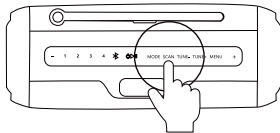 


FM模式下按SCAN键,  
自动搜索电台。

## 快捷存台

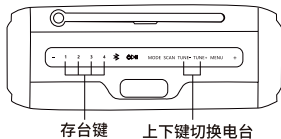 


注意:当选定一个电台频道后,长按存台键1/2/3/4键  
可以将选定的电台存到相应的数字键上。

 按MENU键查看已存电台列表

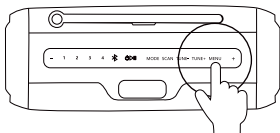

## 电量

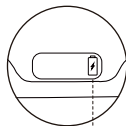 

屏幕上的电池符号闪烁时,请  
尽快充电,否则将自动关机。

音箱充电时间



3H

## 总续航时间

50%音量播放音乐



= 18H

## 保修卡

感谢您选购LANGEHREN(兔小诺)蓝牙音箱，当您在使用过程中出现任何非人为损坏性能故障时，将享有自收货之日起：7天包退，15天包换，1年保修的政策(以下简称“三包政策”)。

### ● 三包政策服务内容：

- 1.自收货之日起7日内，用户需要退货的，确保所收到的商品完好，产品包装和配件齐全，无人为损坏性能和外观受损，可根据购买凭证一次性退款，或者更换同型号同规格产品。(7日无理由退货，用户需要承担运费)
- 2.自收货之日第8日至15日内，产品出现无人为造成的性能故障，可根据购买凭证更换同型号同规格产品。
- 3.在一年保修期内，产品出现无人为造成的性能故障，请用户凭此保修卡和购物凭证与销售商取得联系，享有免费维修。

### ● 以下情况不属于三包政策服务内容：

- 1.自行拆卸造成的损坏；
- 2.因跌落摔坏、泡水、碰撞损坏等人为因素；
- 3.无保修卡、无购买凭证和故意修改凭证；
- 4.已经超过保修期；
- 5.因不可抗力造成的故障或损坏；

### ● 产品信息表：

|        |  |      |  |
|--------|--|------|--|
| 产品名称   |  | 机 型  |  |
| 产品条码   |  | 机身编号 |  |
| 购买凭证   |  | 凭证编号 |  |
| 购买日期   |  | 收货日期 |  |
| 用户姓名   |  | 联系电话 |  |
| 销售商    |  |      |  |
| 销售商联系人 |  | 联系电话 |  |

更多服务可登陆“兔小诺(LANGEHREN)”官网：www.langehren.cn

## 电子信息产品有毒有害物质清单

| 部分名称    | 有毒有害物质或元素 |       |       |           |           |             |
|---------|-----------|-------|-------|-----------|-----------|-------------|
|         | 铅(Pb)     | 汞(Hg) | 镉(Cd) | 六价铬(Cr6+) | 多溴联苯(PBB) | 多溴联苯醚(PBDE) |
| 印刷电路板组件 | ×         | ○     | ○     | ○         | ○         | ○           |
| 塑料      | ○         | ○     | ○     | ○         | ○         | ○           |
| 金属      | ×         | ○     | ○     | ○         | ○         | ○           |
| 电池      | ×         | ○     | ○     | ○         | ○         | ○           |
| 配件      | ×         | ○     | ○     | ○         | ○         | ○           |

本表格依据SJ/T11364的规定编制。

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。

×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。



## 提示

1. 使用产品前请仔细阅读本用户手册并请妥善保管;
2. 首次使用, 请先将本产品充满电;
3. 如果产品长期(超过1个月)不使用, 请对其充电;
4. 必须选择正规厂家生产的经过第三方权威机构认证的充电线和电源适配器。

 
 
## 警告

1. 请勿以任何理由拆除、维修和改装音箱, 否则可能会导致起火、电子击穿甚至彻底损坏本产品;
2. 请勿将设备置于温度过低或过高( $-10^{\circ}\text{C}$ 以下或 $50^{\circ}\text{C}$ 以上)的环境中;
3. 请勿在雷暴天气下使用该设备, 雷暴可导致设备工作不正常, 并增加触电的危险;
4. 请勿用油及其它挥发性液体擦拭本产品;
5. 本产品内含锂电池, 禁止拆解、撞击、挤压或投入火中。若出现鼓胀, 请勿使用。



# 合格证

本产品  
经检验合格准予出厂



型号：LEEDS

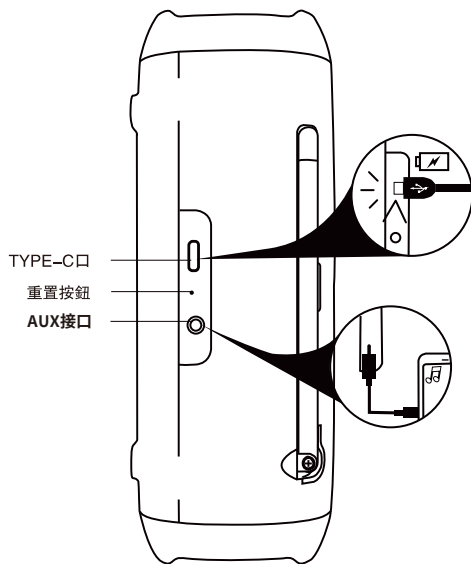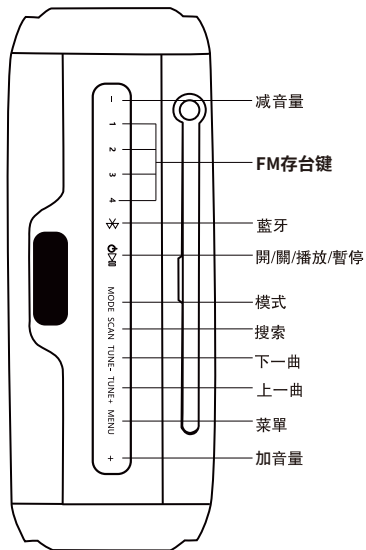

## 開始使用

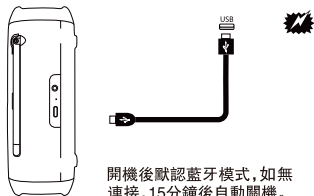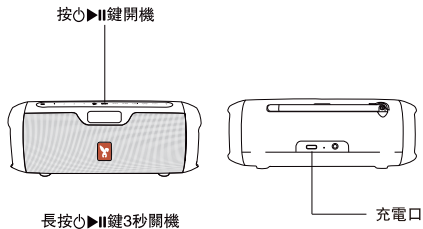  


## 初次配對

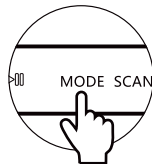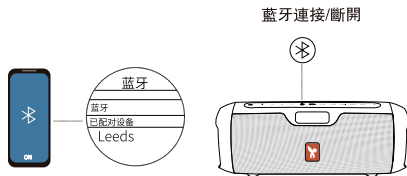  

依次為 藍牙/ AUX/ FM 模式

## 基本操作

 
播放/暂停

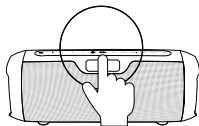


上一曲 TUNE-/+下一曲



 
减一级音量

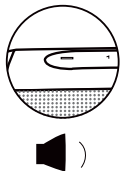

加一级音量

 


## AUX线使用

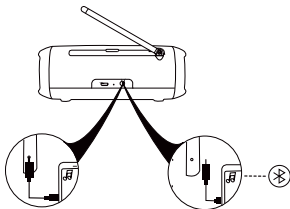 


当插入AUX线后，进入AUX模式。拔出后默认蓝牙模式。

## FM功能

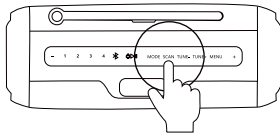 


FM模式下按SCAN键，  
自动搜索电台。

## 快捷存臺

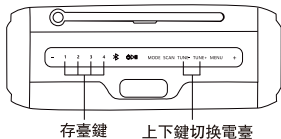 


注意:當選定一個電臺頻道後,長按存臺鍵1/2/3/4鍵  
可以將選定的電臺存到相應的數字鍵上。

 按MENU鍵查看已存電臺列表

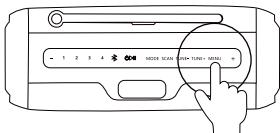

## 電量

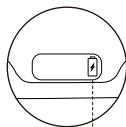 

屏幕上的電池符號閃爍時,請  
盡快充電,否則將自動關機。

音箱充電時間



3H

## 總續航時間

50%音量播放音樂



= 18H



## 保修卡

感謝您選購LANGEHREN (免小諾) 藍牙音箱，當您在使用過程中出現任何非人為損壞性能故障時，將享有自收貨之日起：7天包退，15天包換，1年保修的政策（以下簡稱“三包政策”）。

### ● 三包政策服務內容：

- 1.自收貨之日起7日內，用戶需要退貨的，確保所收到的商品完好，產品包裝和配件齊全，無人為損壞性能和外觀受損，可根據購買憑證一次性退款，或者更換同型號同規格產品。（7日無理由退貨，用戶需要承擔運費）
- 2.自收貨之日第8日至15日內，產品出現無人為造成的性能故障，可根據購買憑證更換同型號同規格產品。
- 3.在一年保修期內，產品出現無人為造成的性能故障，請用戶憑此保修卡和購物憑證與銷售商取得聯繫，享有免費維修。

### ● 以下情況不屬於三包政策服務內容：

- 1.自行拆卸造成的損壞；
- 2.因跌落摔壞、泡水、碰撞損壞等人為因素；
- 3.無保修卡、無購買憑證和故意修改憑證；
- 4.已經超過保修期；
- 5.因不可抗力造成的故障或損壞；

### ● 產品資訊表：

|        |  |      |  |
|--------|--|------|--|
| 產品名稱   |  | 機 型  |  |
| 產品條碼   |  | 機身編號 |  |
| 購買憑證   |  | 憑證編號 |  |
| 購買日期   |  | 收貨日期 |  |
| 用戶姓名   |  | 聯系電話 |  |
| 銷售商    |  |      |  |
| 銷售商聯系人 |  | 聯系電話 |  |

更多服務可登陸“免小諾(LANGEHREN)”官網：[www.langeohren.cn](http://www.langeohren.cn)

## 電子資訊產品有毒有害物質清單

| 部分名称    | 有毒有害物質或元素 |       |       |           |           |             |
|---------|-----------|-------|-------|-----------|-----------|-------------|
|         | 鉛(Pb)     | 汞(Hg) | 鎘(Cd) | 六價鉻(Cr6+) | 多溴聯苯(PBB) | 多溴聯苯醚(PBDE) |
| 印刷電路板組件 | ×         | ○     | ○     | ○         | ○         | ○           |
| 塑料      | ○         | ○     | ○     | ○         | ○         | ○           |
| 金屬      | ×         | ○     | ○     | ○         | ○         | ○           |
| 電池      | ×         | ○     | ○     | ○         | ○         | ○           |
| 配件      | ×         | ○     | ○     | ○         | ○         | ○           |

本表格依據SJ/T11364的規定編制。

○：表示該有害物質在該部件所有均質材料中的含量均在GB/T26572規定的限量要求以下。

×

表示該有害物質至少在該部件的某一均質材料中的含量超出GB/T26572規定的限量要求。



## 提 示

 
 
1. 使用產品前請仔細閱讀本用戶手冊並請妥善保管；
2. 首次使用，請先將本產品充滿電；
3. 如果產品長期(超過1個月)不使用，請對其充電；
4. 必須選擇正規廠家生產的經過第三方權威機構認證的充電線和電源適配器。

## 警 告

1. 請勿以任何理由拆除、維修和改裝音箱，否則可能會導致起火、電子擊穿甚至徹底損壞本產品；
2. 請勿將設備置於溫度過低或過高(-10°C以下或50°C以上)的環境中；
3. 請勿在雷暴天氣下使用該設備，雷暴可導致設備工作不正常，並增加觸電的危險；
4. 請勿用油及其它揮發性液體擦拭本產品；
5. 本產品內含鋰電池，禁止拆解、撞擊、擠壓或投入火中。若出現鼓脹，請勿使用。


# 合格證

本產品  
經檢驗合格准予出廠

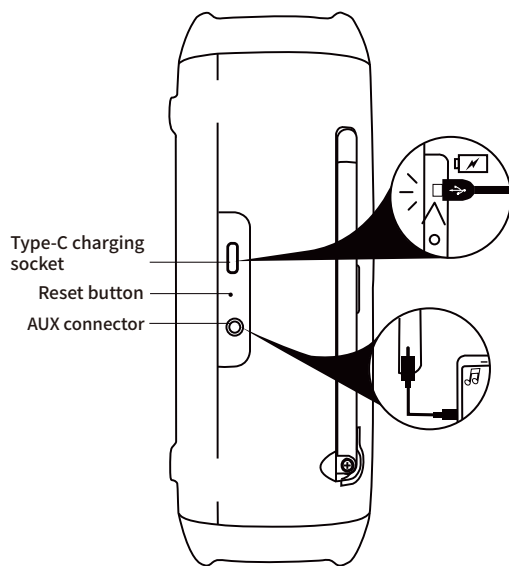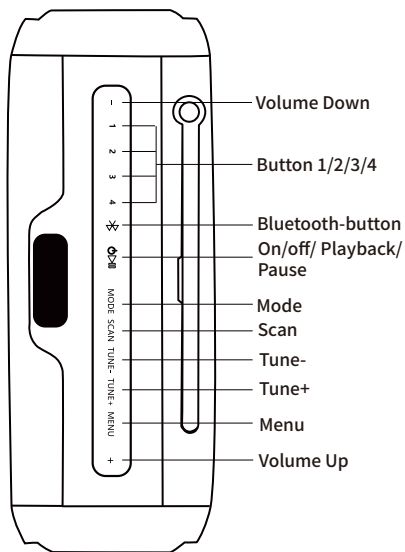




# LET'S GET STARTED

 Press  to turn on

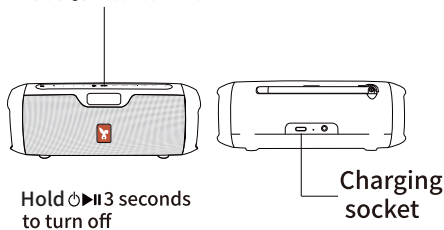


# FIRST TIME PAIRING

   Press  to connect or disconnect

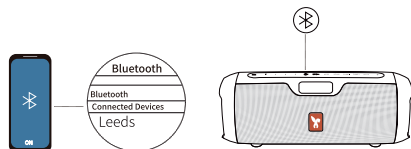

 
Speaker enters Bluetooth mode after started. If there is no connection, it will automatically turn off after 15 minutes.

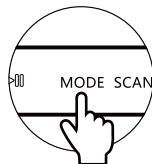

Bluetooth Mode/AUX Mode/FM Mode

## OPERATION

 
 Playback/  
Pause

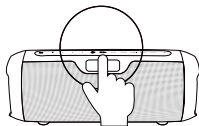


Previous track /  
Next track



 
Volume Down

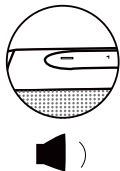

Volume Up

 


## AUX MODE

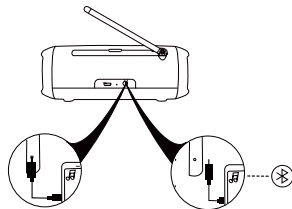 


Speaker enters AUX mode after AUX cable inserted and Bluetooth mode without AUX cable.

## FM MODE

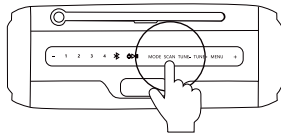 

Press SCAN to automatically search for radio stations under FM mode.


## ADD TO FAVORITES

 


Favorites 1/2/3/4 Select a radio station

**Note:** After selecting a radio station, long press the button 1/2/3/4 add to favorites.

 Press the MENU button to check the favorite stations.

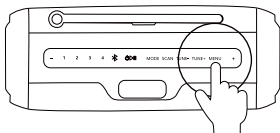

## BATTERY

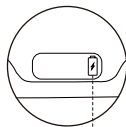 

When the battery symbol flashes, please charge it as soon as possible, otherwise it will turn off automatically.

### Recharging



### 3 HOURS

## TOTAL PLAYTIME

At average use for music at 50% volume.



### = 18 HOURS

## Guarantee card

Thank you for choosing LANGEHREN True **bluetooth speaker**. Since the date of your purchase of the product, if it is not artificially damaged, our company will provide return within 7 days, exchange within 15 days, free maintenance services within one year.

### ● Service item:

1. Within 7 days from the date of receipt, if you need to return the goods, ensure that the goods received are in good condition, the product packaging and accessories are complete, no artificial damage performance and appearance damage, one-time refund, or replace the same model and specifications of the product according to the purchase record. (7 days without reason to return, buyers need to bear the freight)
2. Within 8 to 15 days from the date of receipt, no artificial damage performance and appearance damage, replace the same model and specifications of the product according to the purchase record.
3. Within one year guarantee period, if the product appears the fault not artificially damaged, the user can get free repair in touch with seller by this warranty card and purchase voucher.

### ● The following conditions do not belong to the service contents of the Packages Policy:

1. Damage caused by self-disassembly.
2. Due to falling damage, soaking, collision damage and other human factors
3. Within one year guarantee period, if the product appears the fault not artificially damaged, the user can get free repair in touch with seller by this guarantee card and shopping proof.
4. No warranty card, no purchase voucher and intentional modification voucher
5. Fault or damage caused due to force majeure.

### ● Product information:

|                  |  |                |  |
|------------------|--|----------------|--|
| Product Name     |  | Machine Type   |  |
| Product Code     |  | Product Number |  |
| Purchase Voucher |  | voucher Number |  |
| Purchase Date    |  | Receipt Date   |  |
| User Name        |  | Phone Number   |  |
| Seller           |  |                |  |
| Seller Contact   |  | Phone Number   |  |

More services can be found at LANGEHREN's official website: [www.langeohren.cn](http://www.langeohren.cn)

## LIST OF TOXIC AND HARMFUL SUBSTANCES IN ELECTRONIC INFORMATION PRODUCTS

| TYPE        | Toxic or harmful substance or elements |    |    |      |     |      |
|-------------|----------------------------------------|----|----|------|-----|------|
|             | Pb                                     | Hg | Cd | Cr6+ | PBB | PBDE |
| PCBA        | ×                                      | ○  | ○  | ○    | ○   | ○    |
| Plastic     | ○                                      | ○  | ○  | ○    | ○   | ○    |
| Metal       | ×                                      | ○  | ○  | ○    | ○   | ○    |
| Battery     | ×                                      | ○  | ○  | ○    | ○   | ○    |
| Accessories | ×                                      | ○  | ○  | ○    | ○   | ○    |

This form is based on the provisions of SJ/T11364 establishment.

○ : it means the harmful substances in the parts of homogeneous material content all exceed limited requirements of GB/T26572 regulations.

× : it means the harmful substances in the parts of at least one homogeneous material beyond limited requirement.



## Caution

1. Please read this user manual carefully before using the product and safe keeping.
2. For first use, please fully charge the product;
3. If the product is not used for a long time (more than 3 months), please charge it.
4. It is necessary to use the charging cable and power adapter produced by a formal manufacturer and certified by a third party authority.

## Warning

1. Do not remove or repair modified sound box for any reason, otherwise it may cause fire, electronic breakdown or even complete damage to the product.
2. Do not place the product in an environment where the temperature is too low or too high (below -10° C or above 50° C)
3. Do not use the product during thunderstorms.  
Thunderstorms may cause abnormal operation of the product and increase the risk of electric shock.
4. Do not wipe the product with oil or other volatile liquids;
5. This product contains lithium battery, do not disassemble, impact, squeeze or put into fire. Do not use if there is swelling. Do not expose to high temperature.

## QUALITY CERTIFICATE

**Q.C.  
PASSED**